

D-Link DCS-930L and DCS-932L

Network Camera Setup Manual

for the RavenShoeSecurity.com

Internet Recording Service



Notice

Copyright © 2012 RavenShoeSecurity.com.

All rights reserved. No part of this document may be reproduced by any mechanical, photographic, or electronic process without the prior written permission of the publisher. This document is authorized solely for 1) the use of RavenShoeSecurity.com customers or 2) review by potential customers.

D-Link and MyDLink

D-Link and MyDLink are trademarks of the D-Link Corporation, Taipei City, Taiwan. D-Link is not connected in any way to RavenShoeSecurity.com. The camera configuration information included in this document has not been reviewed by D-Link and serves solely as a record of our endeavours to use D-Link cameras with our service.

Disclaimer

While best efforts have been made to ensure that the content of this document is accurate and free of errors, the publisher is not responsible for any consequential or incidental damages arising from the information presented here-in.

Publisher Contact Info

RavenShoeSecurity.com
Box 82, Suite 437
130 Davis Dr.
Newmarket, Ontario
Canada L3Y 8V4

info@RavenShoeSecurity.com

Table of Contents

Introduction.....	4
Preparation	5
DCS-930L/932L Admin Login Credentials.....	5
Internet Connection.....	5
WiFi SSID and WEP/WPA/WPA2 key.....	7
Access to Camera's Internal Website	7
MyDLink.com.....	8
DLink Setup Software.....	8
Network Places	8
Camera Setup Procedure.....	9
Step 1: Initial Power Up.....	9
Step 2: Access the Camera's Admin Functions	9
MyDlink.com Admin Access.....	10
DLink Setup Wizard Software Admin Access	13
Network Places Admin Access	15
Step 3: Video.....	17
Step 4: Motion Detection	18
Step 5: FTP	20
Step 6: Time and Date.....	24
Step 7: Enabling WiFi.....	25
Glossary	28

Introduction

The D-Link DCS-930L and DCS-932L are network cameras that are capable of sending motion activated pictures over the Internet to RavenShoeSecurity.com. The DCS-930L has colour daylight-only vision as compared to the DCS-932L which automatically switches to IR (Infrared) when the light level is low. With built in IR illuminators the DCS-932L can pretty much take pictures in the dark. Aside for the night vision functions, the two cameras are otherwise equivalent. Screen shots from the DCS-932L are used in this manual.

This document gives the step-by-step instructions needed to set up a DCS-930L or DCS-932L network camera to send motion activated pictures to RavenShoeSecurity.com.

The skills required to follow these instructions would include:

- 1) Be able to use a web browser and have experience with the advanced user features and settings of Gmail, Hotmail, Yahoo, eBay, Facebook, LinkedIn, and so forth.
- 2) Be able to identify and physically access the Internet router or modem provided by your telephone or cable company. Be comfortable with connecting computer devices using RJ45 cables.
- 3) If you are using WiFi to connect your camera you will need to know the SSID (Service Set Identifier) and WEP/WPA/WPA2 key to activate the camera's WiFi functions.

Preparation

In order to set up the camera to operate with RavenShoeSecurity.com you will need the following items:

DCS-930L/932L Admin Login Credentials
Internet Connection
Optional WiFi SSID and WEP/WPA/WPA2 key
Access to the camera's Internal Website
RavenShoeSecurity.com ftp Account

DCS-930L/932L Admin Login Credentials

For a DCS-930L/932L out of the box the admin userID is “**admin**” and the password is blank. If this has been changed and you do not have this information it will be necessary to hard reset the camera.

A hard reset is performed by pushing an unfolded paper clip into the small hole on the back of the camera marked RESET. When you push the paper clip in, you will feel a click when the reset button has been activated. Hold this pose for 3 seconds or more while the camera power is on. All settings in the camera (including the admin userID) will be reset to factory defaults.

Internet Connection

If the camera is being hard wired then it will be necessary to install an RJ45 Ethernet jack that provides access to the Internet in the area where the camera is being deployed. The camera will also need power. Since the camera uses less than 5 watts of power, the lightest of extensions can be used – such as a 30m (~100ft) 16 gauge Christmas tree light power cord.

The DCS-930L/932L comes with a 1m (~3ft) RJ45 Ethernet cable. A longer one (up to 30m or ~100ft) can be purchased at a computer supply store. Any RJ45 style Ethernet connection where a laptop computer can be plugged in and access the Internet can support a network camera.

If the camera has already been setup to use WiFi then you can skip any specific WiFi setup procedures listed here.

If the camera has not been setup to use WiFi and you intend to deploy it in the WiFi mode then there is fair odds that you will need to physically connect the DCS-930L or DCS-932L to your router using an Ethernet cable during the setup process. Therefore as part of preparation involving a WiFi setup, you should ensure that you have physical access to the router and that there is power near by for the camera.

The **router** is usually a single box that your ISP (Internet Service Provider) installs to provide Internet service. These single boxes are actually a combo of modem and router all-in-one. Other times the ISP provides just a modem, and you add your own router to the mix, which may or may not provide a WiFi access point. For the purposes of this discussion the router and modem are assumed to be integrated into one appliance referred to as simply a router.

The router does require power and generally has a few flashing lights. The router can be identified by a connection from your physical cable TV wire or physical phone line into the router. This physical wire is the electronic path to and from the Internet. In a home environment the router is often installed near a TV, if it has been provided by a cable TV company. In an office environment there is often a Telephone Room where routers and other telecom equipment are installed.

Routers generally have 4 or more RJ45 Ethernet connectors to plug in devices (computers, Internet radios, etc). Some routers also provide wireless access using WiFi and may or may not have one to three antennae. Any devices connected to the router either physically with an RJ45 Ethernet cable or wirelessly through WiFi are said to be on the LAN (Local Area Network).

Devices on the LAN can initiate connections with other devices on the LAN or the Internet (known as the WAN [Wide Area Network]). However devices on the WAN are not permitted to initiate connections with devices on the LAN as the router will not allow it. In this capacity the router functions as a firewall.

WiFi SSID and WEP/WPA/WPA2 key

There are 2 ways to setup the WiFi function of the camera. The easy way is to use WPS (Wireless Protected Setup). This, as described in the WiFi setup section, involves pressing the WPS button on the router and the camera at the same time which causes the router to tell the camera the SSID and key. It is a very easy and quick method to setup WiFi devices.

However not all WPS functionality is compatible and there are fair odds (in our humble experience) that it will not work. So Plan "B" is to use the camera's admin functions to identify the WiFi networks that it can see and then to manually enter the key. So for Plan "B" you will need the SSID and key.

If you do not have this information at hand then best to call your ISP if they are ones that provided the router. If they provided just the modem then they will not be able to help with this problem. ISP tech staff generally can login to routers that they provide and get this information for you.

Alternatively if you know the IP address, admin userID, and admin password for your router's admin functions, you can login yourself from any PC on the LAN. Since routers are different, it is impossible to give a specific description. But WiFi routers generally have a wireless settings page where you can see what the SSID and wireless key is. Accessing the admin functions of a router is recommended for advanced computer users only. It is very easy to put your LAN completely out of kilter by accidentally pushing the wrong buttons.

Access to Camera's Internal Website

During the setup you will need to connect a computer browser to the internal admin website of your camera. While each camera has a full blown computer inside, there is no keyboard, mouse, or screen. To provide a human interface for this computer the camera has an "internal website" with admin and setup functions as well as access to live video. To access the camera's admin functions you may use MyDlink.com – which means you can reconfigure the camera from anywhere in the world and from pretty much any device (computer or smart phone). Alternatively you can access the admin functions of the camera from a computer connected to the same LAN (Local Area Network) as the subject camera.

MyDLink.com

Setting up MyDlink.com is out of scope for this document. Refer to the documentation for the DCS-930L/932L for more information. Also, at the time of this writing, D-Link provides free technical support for users setting up MyDlink.com within the first 30 days after a camera purchase.

DLink Setup Software

Without MyDlink.com functionality it will be necessary to download the D-Link setup software for Windows XP, Windows 7, and Mac using this link:

<http://www.dlink.ca/products/?pid=DCS-932L&tab=3>

Click on the *Additional Downloads* link. Scroll down to the *PC Setup Wizard SE* for **Windows XP or Windows 7** users or *Mac OSX Setup Utility* for **Mac** users.

Download and install this software. Run it once to make sure it is working. It should report all the D-Link cameras that you have powered up and connected on your LAN. If you have none then this software should show that fact as well.

The main purpose of this setup software will be to find the LAN IP address of the camera when it powers up and connects to your router. The setup software will then open a browser to the camera's internal website where you can access the admin and setup functions. You can also use this same IP address from any other device on the LAN (iPad, SmartPhone) as a URL to access the camera.

Network Places

DLink setup software is definitely required for Mac. However if you are using Windows XP or Windows 7 and have the right router and the right updates and favourable planetary alignments then your camera(s) may show up in Network Places. Or they may not. The feature required of Windows and your Router for this to operate is uPNP (Universal Plugs aNd Play). But it is a frustrating thing to get working. It could make a person climb to the top of a flagpole and set their hair on fire! So our approach is either uPNP works or we will just switch to using the *D-Link Setup SE* software and keep our hair just the way it is. It is worth noting that when uPNP is working that it seems quite reliable – so it's worth a shot.

Camera Setup Procedure

Step 1: Initial Power Up

To start the camera setup process, first connect the camera to the router using the supplied RJ45 Ethernet cable. Power the camera up and observe that the light on the front of the camera turns red. Wait a minute or so for the light on the front of the camera to turn green. If the light does not turn green then unplug the cable from the camera and connect it to a laptop and verify that the Internet works. If the Internet is working then contact D-Link for support.


Step 2: Access the Camera's Admin Functions

The next step in the setup process is to access the camera's internal website. There are 3 possible options for this:

<i>Method</i>	<i>Platform</i>
MyDLink.com	All computers, laptops, operating systems, smart phones, Android, iPhone, Blackberry,...
DLink Setup software	Windows XP, Windows 7, and Mac
Network Places	Windows XP and Windows 7 but only on randomly selected systems.

MyDlink.com Admin Access


Login to your MyDLink.com account:

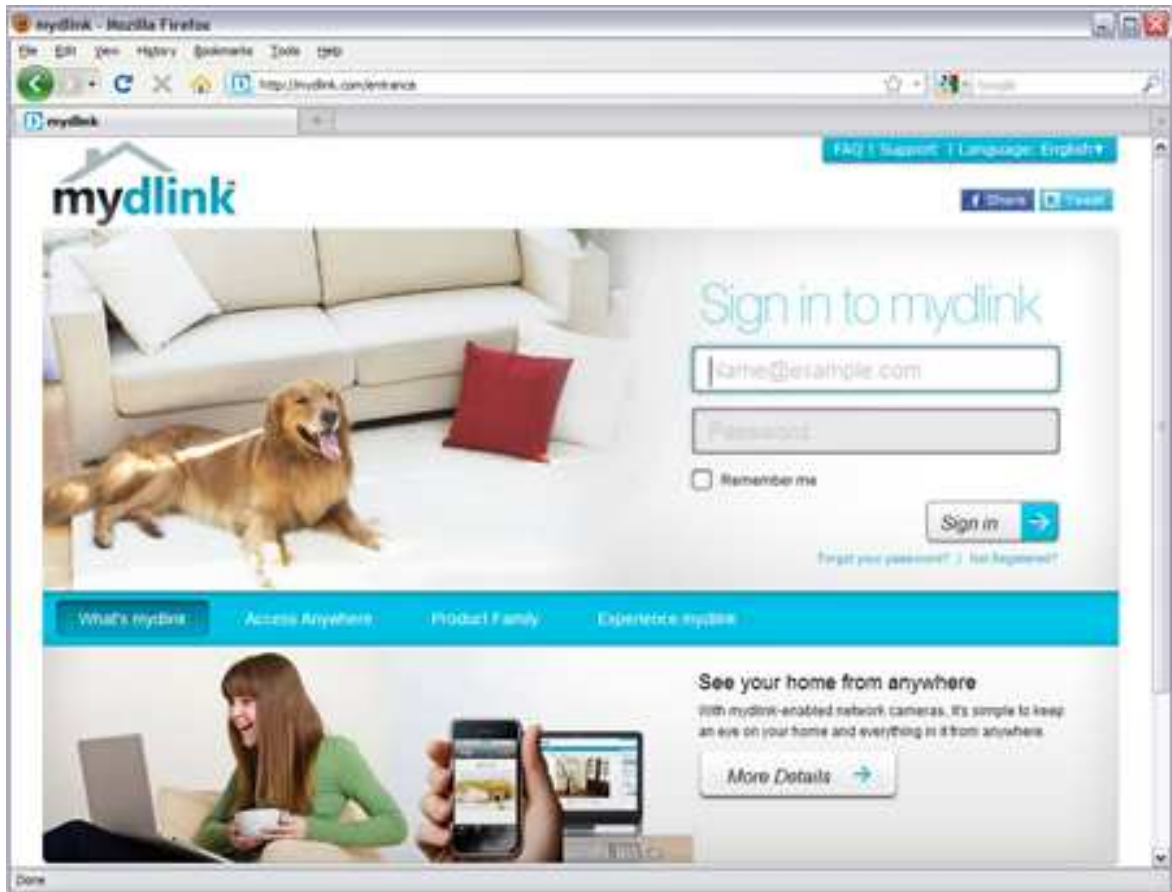

Click the *Settings* tab, then click the *Advanced Settings* button:




Login a second time (for security concerns) with your MyDLink.com account:

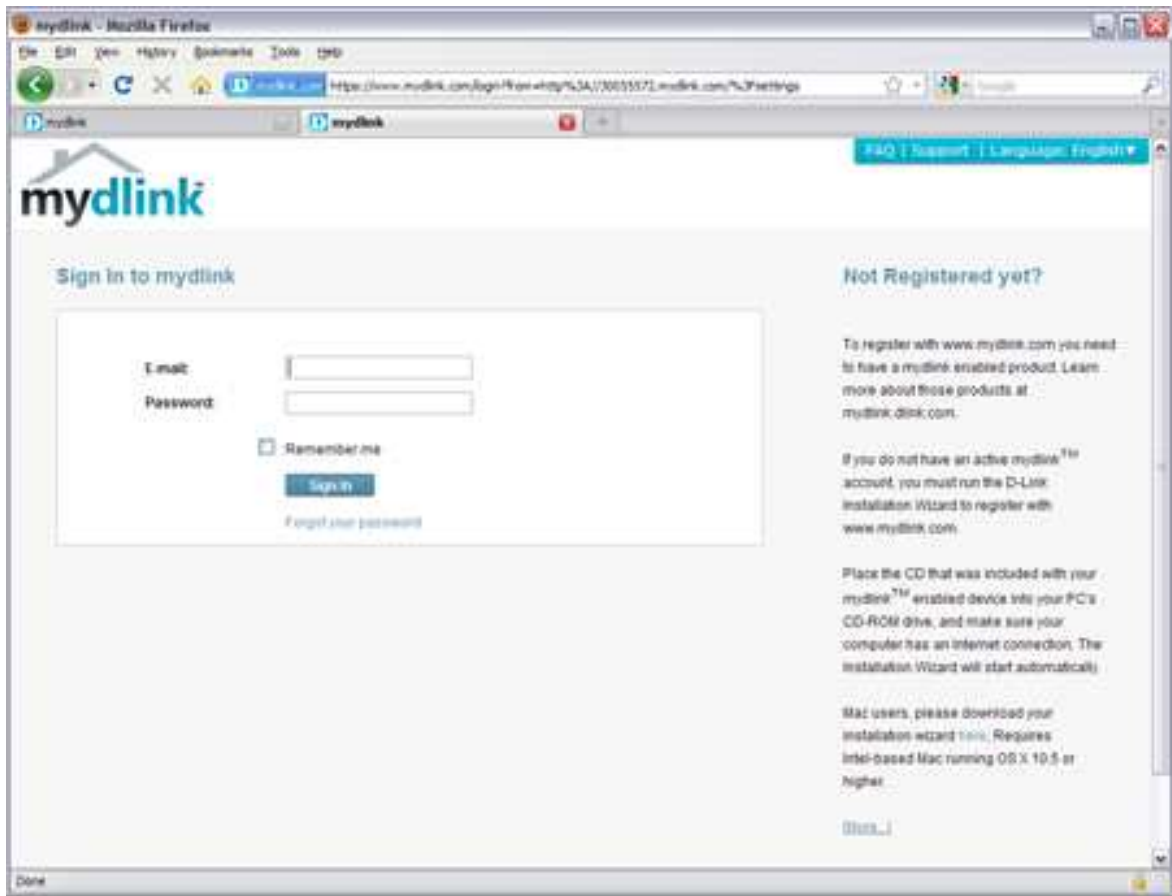

If it's the first time you have used MyDLink.com to access the admin functions of your camera(s) on the computer you are using, you may be asked to make a security certificate exception. On subsequent visits you will not be asked again.

Next you will be prompted for the Login admin userID and password for **your camera**. This is not the same as your MyDLink.com credentials. For a new camera or one that has been hard reset the *User Name* is "admin" and the *Password* is blank.

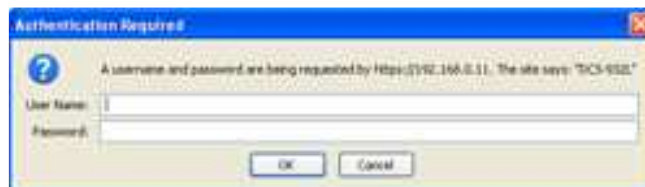

Skip ahead to Setup Step 3...

DLink Setup Wizard Software Admin Access


The DLink Setup Wizard software is the sure fire way to access your camera's admin functions from any computer that is on the same LAN as the camera. There are versions for both the PC and the Mac.

The Windows XP Version is shown below:




If you have powered down or powered up any DLink cameras since you started the wizard then click the *Search* button to get a fresh list. Click on the subject camera to highlight it (as shown) and then click the *Link* button to start a browser.

You will then be asked to login to the camera's admin website:

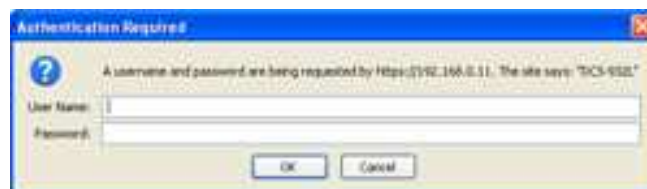

For a new camera or one that has been hard reset the *User Name* is “admin” and the *Password* is blank.

Click on the *Setup* tab to navigate to this screen:

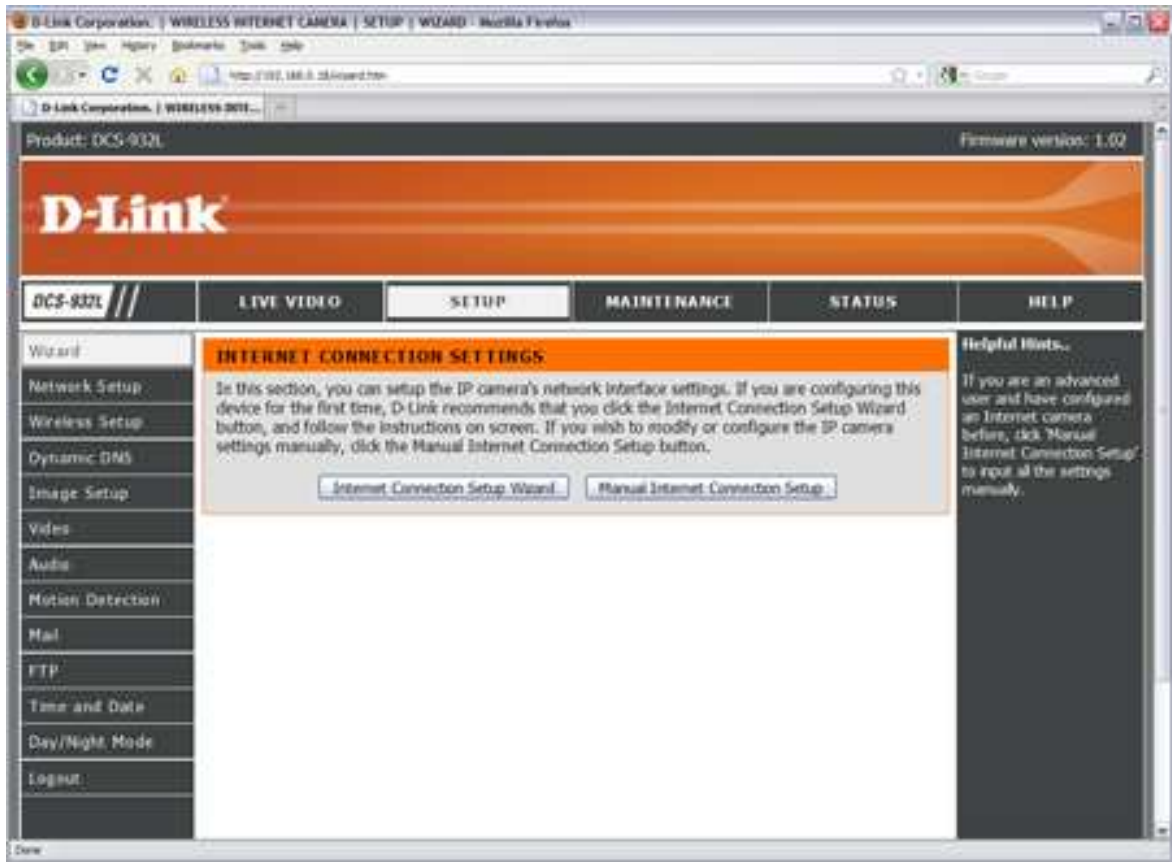


Now skip ahead to Step 3...

Network Places Admin Access

Open *My Network Places* (on XP) or *Network Places* (Windows 7) to see the following display. The four top blue and grey icons are network cameras.




Double click the subject camera and you should then get asked for the camera's admin userID and password.

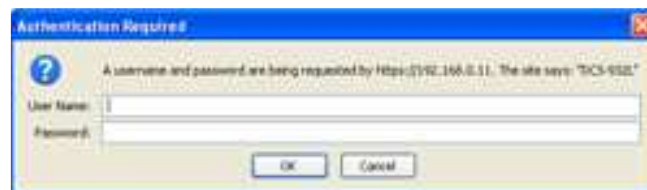


For a new camera or one that has been hard reset the *User Name* is “admin” and the *Password* is blank.

Click on the *Setup* tab and you should now be at the Camera Admin Website Setup Page:

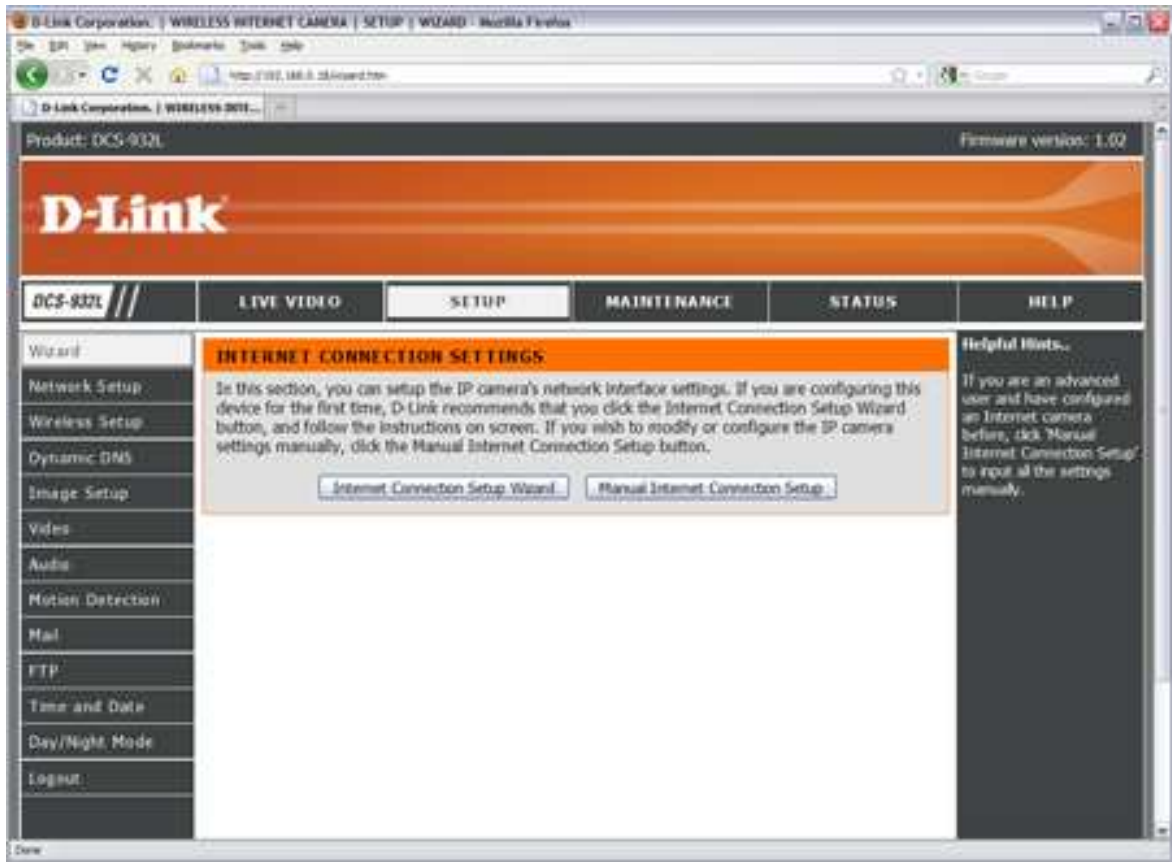


Step 3: Video

Click the *Video* menu and set the resolution to 640x480 and the *Light Frequency* depending on where you are deploying the camera (60Hz for North America). Click *Save Settings* to update.

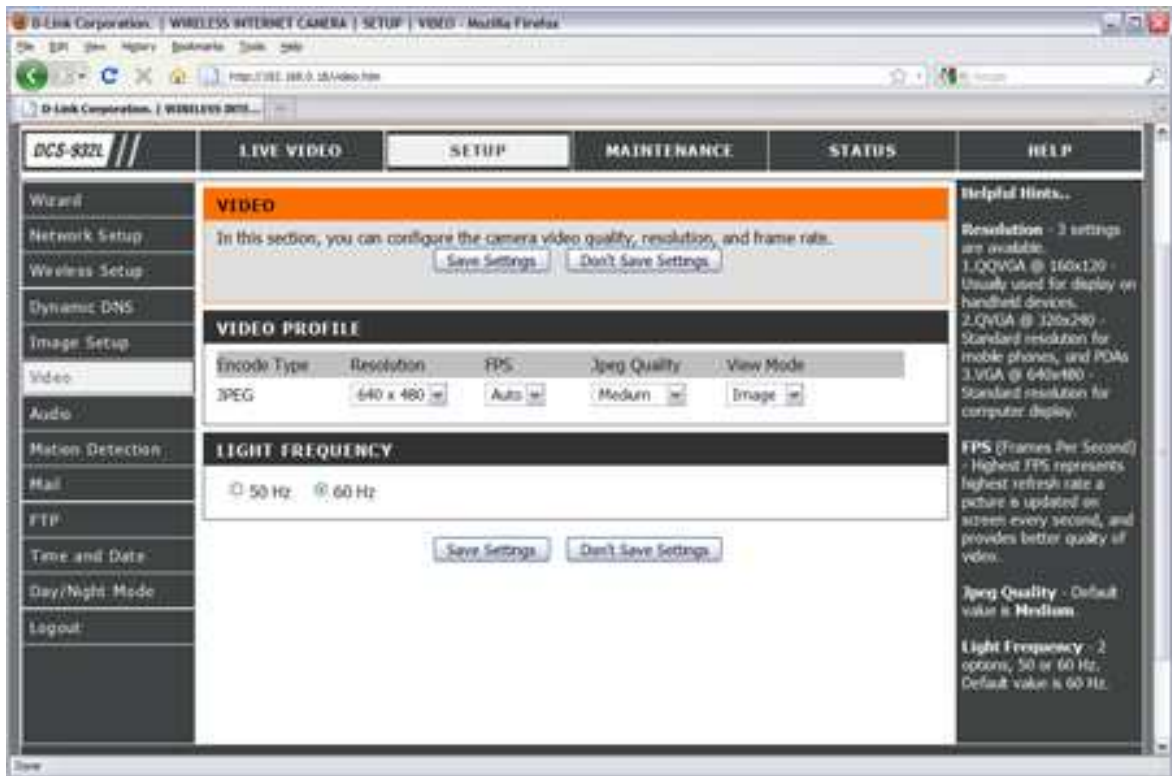

Step 4: Motion Detection

Click on the *Motion Detection* menu and then click the *Enable* radio button:

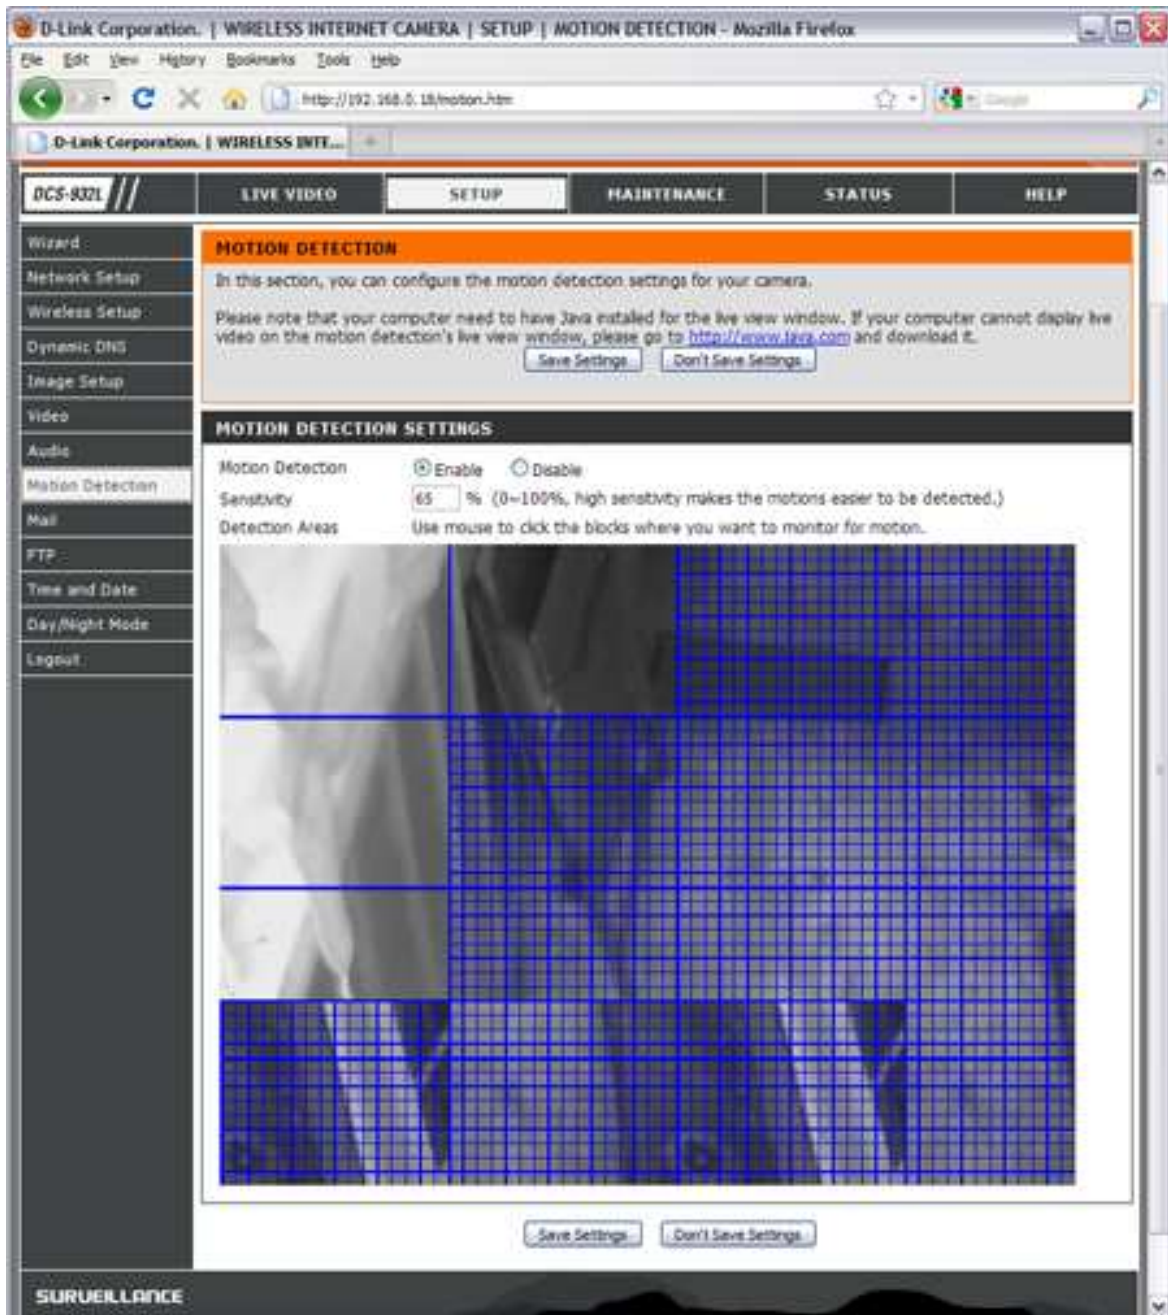

Clicking on any of the 25 squares in the picture will toggle a blue cross hatch pattern on and off. When the cross hatching is present that area of the image is being monitored for motion. Setup a pattern that is appropriate for your situation.

Using this mask the user has a large amount of control over the motion detection function and can greatly reduce the number of junk images being sent out. By configuring the camera to only look in important zones of the scene for motion, images will not be sent when cars drive by, or the drapes waiver, or a tree or flower moves about in the wind.

A good starting value for *Sensitivity* would be 65%.

By increasing the sensitivity value, smaller and smaller amounts of motion will trigger the camera. By decreasing the sensitivity value larger amounts of motion will be needed to trigger an event.

When you have it just the way you want it, click on the *Save Settings* button.

Step 5: FTP

The FTP screen is where information about your RavenShoeSecurity.com account is entered and the name of the camera is set.

The screenshot shows the D-Link Corporation WIRELESS INTERNET CAMERA SETUP page for the DCS-932L model, specifically the FTP configuration section. The browser is Mozilla Firefox, and the URL is http://192.168.0.18/Upload.htm. The page has a navigation bar with tabs: LIVE VIDEO, SETUP (selected), MAINTENANCE, STATUS, and HELP. A left sidebar contains a menu with options: Wizard, Network Setup, Wireless Setup, Dynamic DNS, Image Setup, Video, Audio, Motion Detection, Mail, FTP (selected), Time and Date, Day/Night Mode, and Logout. The main content area is titled 'FTP' and contains the following sections:

- FTP:** A message stating 'In this section, you may configure a FTP server to receive the images.' with 'Save Settings' and 'Don't Save Settings' buttons.
- FTP SERVER:** Fields for Host Name (RavenShoeSecurity-?????.info), Port (21, with a note '(Default is 21)'), User Name (????????), Password (masked with asterisks), Path (/), and Passive Mode (radio buttons for Yes and No).
- TIME SCHEDULE:** A section with a checked box 'Enable uploading images to the FTP server'. It includes radio buttons for 'Always', 'Schedule', and 'Motion Detection'. The 'Schedule' section has fields for Day (Mon-Sun), Time Period Start (06:30:00), and Stop (22:30:00). The 'Motion Detection' section has fields for Image Frequency (1 Frame/Second), Base File Name (Camera Name), and File options (OverWrite, Date/Time Suffix, Create subfolder by, Sequence Number Suffix).
- TEST FTP SERVER:** A section with a message 'A JPEG file will be sent to the above FTP server for testing. (File name: test_date_time.jpg)' and a 'Test' button.

On the right side, there is a 'Helpful Hints...' section with the following text:

- Host Name:** This is the IP address of the FTP server that you will be connecting to.
- Port:** The default port is 21.
- User Name:** The user name that required accessing the external FTP server.
- Password:** The password of the external FTP server.
- Passive mode:** Enabling passive mode will allow access to an external FTP server if your camera is behind a router protected by a firewall.
- Enable uploading images to the FTP server:** Checking this box will enable the camera to upload images to above FTP server. Select **Always** to enable camera's uploading images to the FTP server always. Select **Schedule** if you like to specify the time and day when the camera to start and stop uploading the images to the FTP server. Select **Motion Detection** if you would like to camera uploading images to the FTP server when the motions are detected.
- Image Frequency:** User can choose and define the numbers for both **Frames/Second** and **Seconds/Frame**.
- Base File Name:** The name that contains the time stamp information, for example DCS-932L_2005072116425301.jpg. This means that the camera took a snapshot in the year 2005, July 21 at 16:42:51 (hour:minute) and 01.

Copy and paste the *Host Name*, *User Name*, and *Password* from the *Settings* menu of your RavenShoeSecurity.com home page (shown below) to the corresponding fields in the FTP Server section (shown above).

The *Port* should be set to **21**. The *Path* should be set to */*. *Passive Mode* should be **Yes**.



Now back to the *Ftp* page of the camera's admin website:

D-Link Corporation. | WIRELESS INTERNET CAMERA | SETUP | FTP - Mozilla Firefox

File Edit View History Bookmarks Tools Help

http://192.168.0.18/Upload.htm

D-Link Corporation. | WIRELESS INTE...

DCS-932L // LIVE VIDEO SETUP MAINTENANCE STATUS HELP

Wizard
Network Setup
Wireless Setup
Dynamic DNS
Image Setup
Video
Audio
Motion Detection
Mail
FTP
Time and Date
Day/Night Mode
Logout

FTP

In this section, you may configure a FTP server to receive the images.

Save Settings Don't Save Settings

FTP SERVER

Host Name: RavenShoeSecurity-?????.info
Port: 21 (Default is 21)
User Name: ??????????
Password: *****
Path: /
Passive Mode: ☒ Yes ☐ No

TIME SCHEDULE

☒ Enable uploading images to the FTP server

☐ Always
☐ Schedule
Day: ☐ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat ☐ Sun
Time Period Start: 06:00:00 (Example : 06:30:00)
Stop: 22:30:00 (Example : 22:30:00)
☒ Motion Detection

Image Frequency: Frames/Second
Base File Name: Camera Name
File: ☐ OverWrite
☒ Date/Time Suffix
☐ Create subfolder by
☐ Sequence Number Suffix Up to

TEST FTP SERVER

A JPEG file will be sent to the above FTP server for testing.
(File name: test_data_time.jpg)

Test

Save Settings Don't Save Settings

Helpful Hints...

Host Name:
This is the IP address of the FTP server that you will be connecting to.

Port:
The default port is 21.

User Name:
The user name that required accessing the external FTP server.

Password:
The password of the external FTP server.

Passive mode: - Enabling passive mode will allow access to an external FTP server if your camera is behind a router protected by a firewall.

Enable uploading images to the FTP server:
Checking this box will enable the camera to upload images to above FTP server.
Select **Always** to enable camera uploading images to the FTP server always.
Select **Schedule** if you like to specify the time and day when the camera to start and stop uploading the images to the FTP server.
Select **Motion Detection** if you would like to camera uploading images to the FTP server when the motions are detected.

Image Frequency: - User can choose and define the numbers for both **Frames/Second** and **Seconds/Frame**.

Base File Name: - The name that contains the time stamp information, for example DCS-932L_2005072116425931.jpg. This means that the camera took a snapshot in the year 2005, July 21, at 16:42:51 (hour:minute:second) and 01.


Under *Time Schedule* make sure *Enable unloading images to the ftp server* is checked. Click the *Motion Detection* radio button.

In *Base File Name* enter the name you would like for the camera. **** Make sure the camera name ends with a letter and not a number **** If you are using multiple cameras then make sure each camera has a different name or the RavenShoeSecurity.com website will combine the images into one interwoven stream.

In the *File* options area click the *Date/Time Suffix* radio button. Make sure the *Create subfolder by* check box is not checked.

Click *Save Settings*.


To test the ftp connection click on the *Test* button. Wait 5 seconds then click the *Status* menu item (along the top) and check the *Ftp Server Test* results.

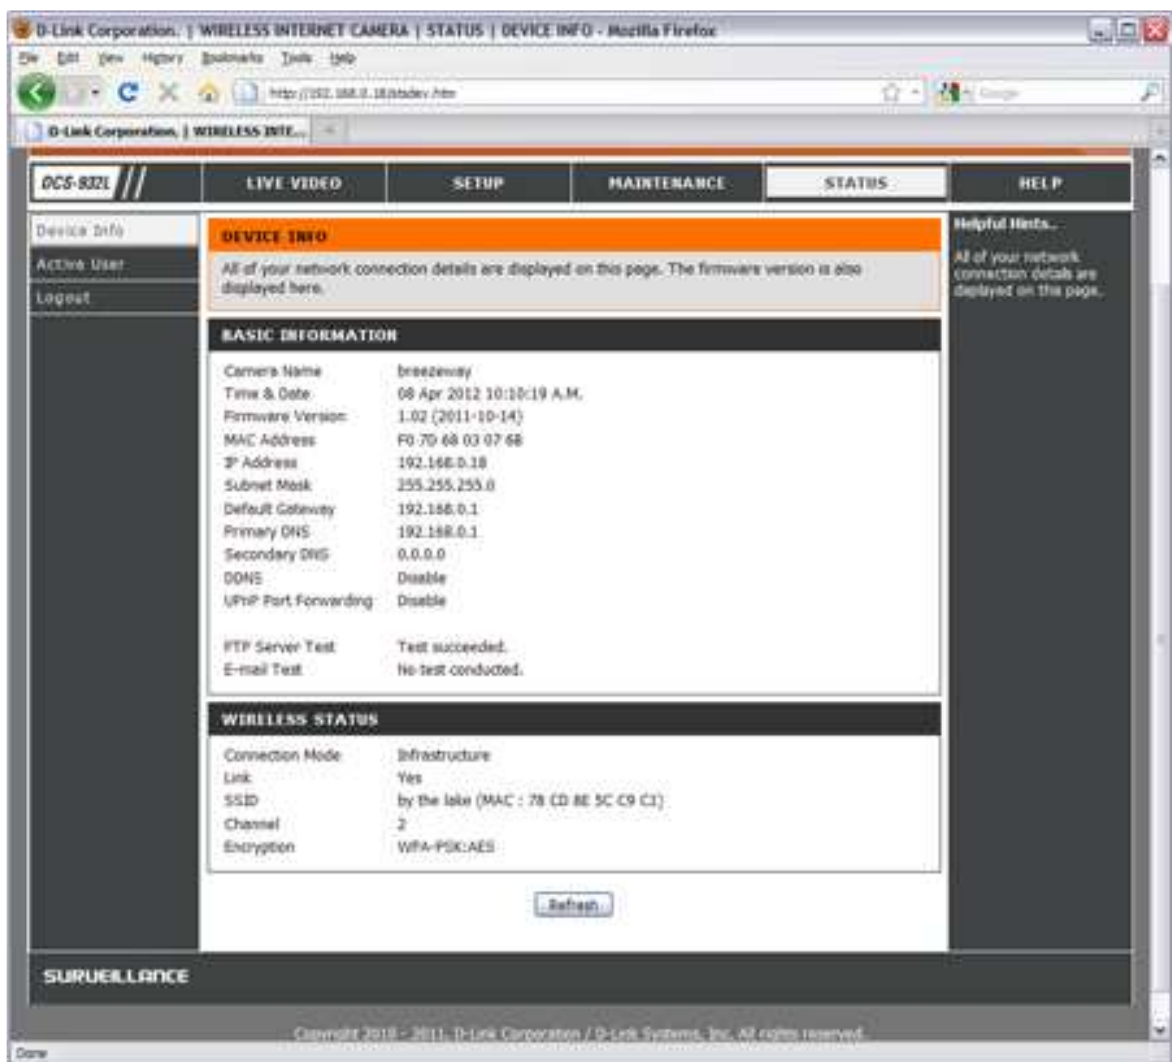

If you refresh your RavenShoeSecurity.com home page you should see the test image.

Step 6: Time and Date

Click on the *Time and Date* menu item to see this page:

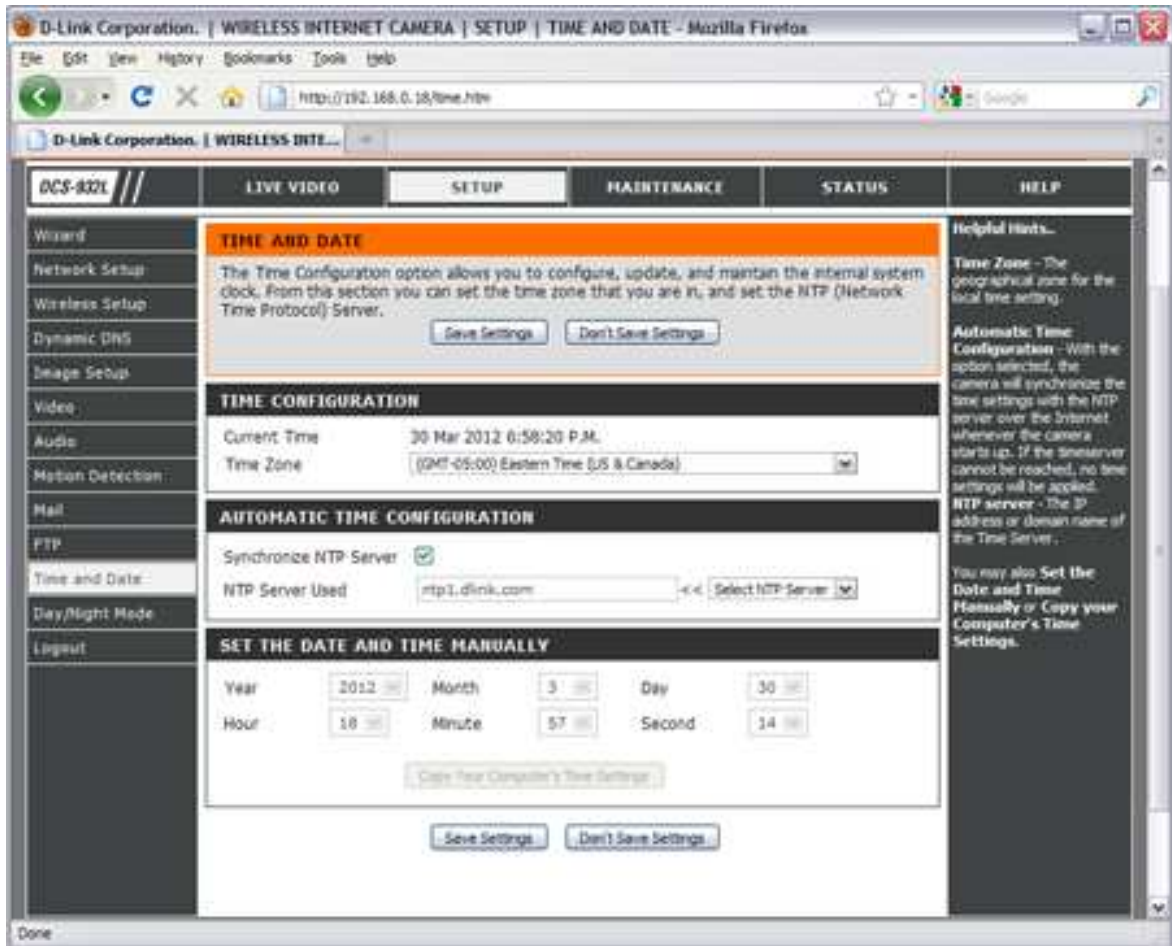

In the *Time Configuration* section select the appropriate *Time Zone*.

In the *Automatic Time Configuration* section check the *Synchronize NTP Server* checkbox. Use the drop down box to the right of the *NTP Server* field to select a pre-configured **time server**.

Click *Save Settings*

Your camera should now be fully functional and integrated with RavenShoeSecurity.com as long as it is plugged in using the RJ45 Ethernet cable. Do a little dance in front of the camera and then check your RavenShoeSecurity.com account for pictures. Unless you are going to setup WiFi you are done!

Step 7: Enabling WiFi


There are two ways to setup WiFi. One is called WPS (Wireless Protected Setup) that is quite simple, however it does not work with all routers. But it is worth a shot.

To use WPS press and hold the WPS button on the back of the DCS-930L or DCS-932L camera until the blue light starts flashing (about 7 seconds). Then immediately press the WPS button on the router. With some routers it seems to be better to repeatedly press the WPS button until the blue light on the camera stops flashing. With other routers it is best to just hold the WPS button down until the blue light stops flashing. In any case, when the blue light stops flashing the green light on the front of the camera should come on within a minute. If so then bonus – your camera has been tuned into your WiFi network using WPS.

If you believe WPS has been successful then remove the camera's power and disconnect the RJ45 cable. Power the camera up. The light on the front should first be red and then within a minute it should turn green – indicating that camera setup is complete!

If WPS does not work right away then, in our experience, it is better to just abandon this approach and use the manual method. This will be easier than trying to debug WPS.

Click the *Wireless Setup* menu under *Setup*.

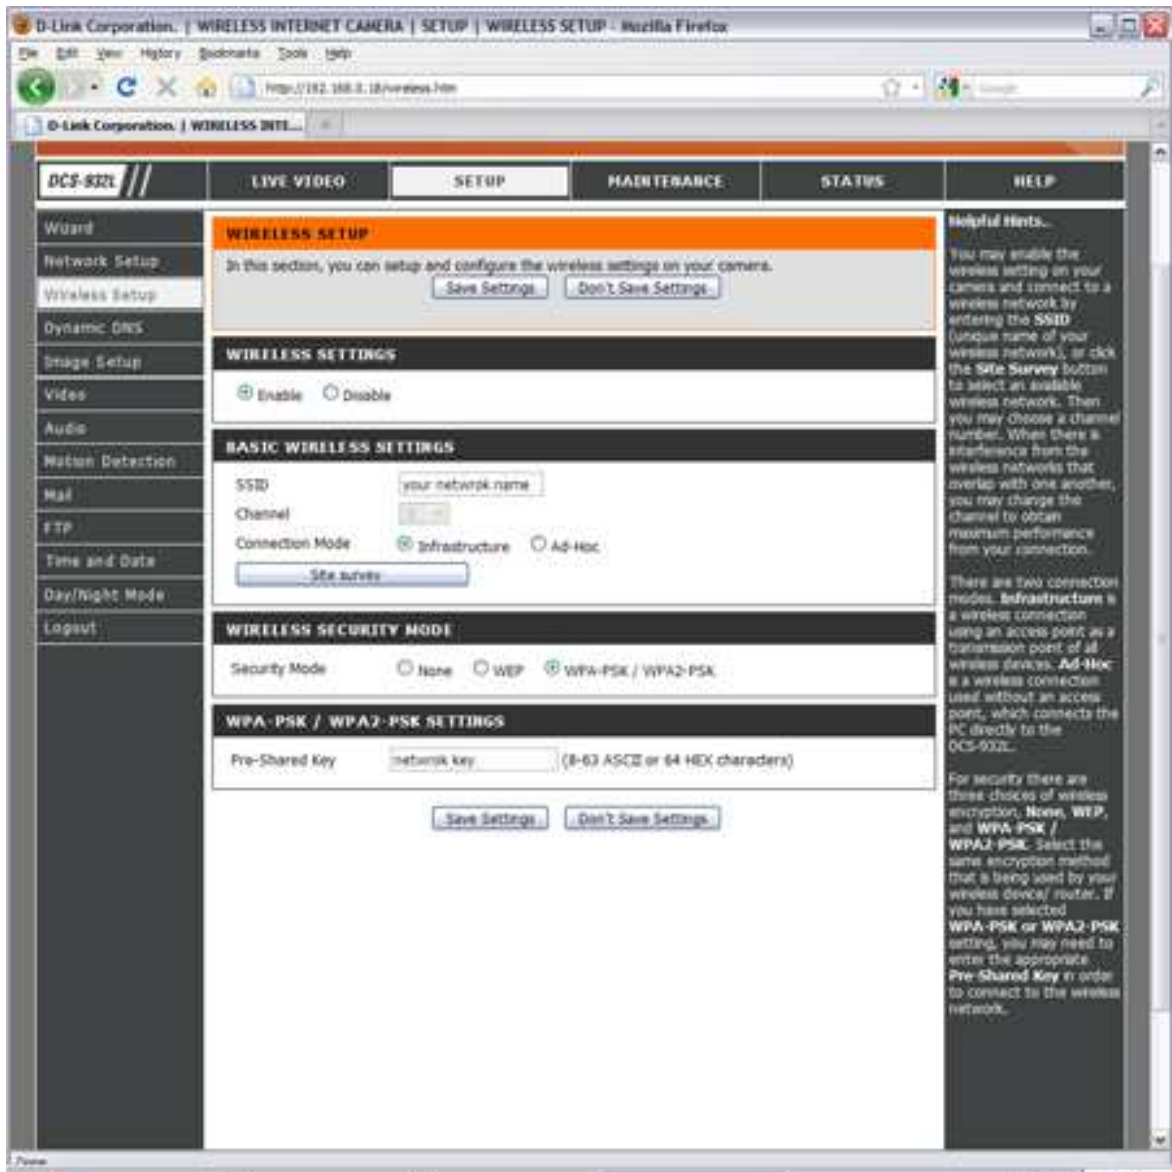

Click the *Enable* radio button.

Click the *Site Survey* button and after a few seconds another window will pop up with all the WiFi networks that the camera can “see”. Click the radio button beside the WiFi network that you want the camera to use. Then click the *Exit* button.

The camera generally figures out which security mode to use automatically. But you can override this in the *Wireless Security Mode* section. If your WiFi requires a

key for access (most likely) then select either *WEP* or *WPA-PSK/WPA2-PSK*. *WEP* is an earlier standard and considered less secure, so if you have the option to use *WPA* then that would be a better choice. If the WiFi network is not secured then click the *None* radio button.

In the *Pre-Shared Key* box enter the key for your WiFi network if it is secured. Otherwise leave it blank. Remember that for WiFi keys capital and small letters are different.

Click the *Save Settings* button.

Removed the power cord and the RJ45 Ethernet from the camera. Wait a few seconds and then reconnect the power. The red light on the front of the camera should come on and within a minute it should turn green – Indicating that WiFi is working and your camera is all setup.

Do a little jig in front of the camera and refresh your RavenShoeSecurity.com home page to see the pictures. Your camera is setup!

Glossary

DVR – Digital Video Recorder: Device that records video (and optionally sound) from one or more network cameras.

GB – GigaByte (1,000,000,000 bytes)

IP – Internet Protocol

IR – Infrared: A type of light that network cameras can see but the human cannot see that is used for night vision.

ISP – Internet Service Provider: Company that provides your Internet Service. Usually the telephone or cable company.

KB – KiloByte (1,000 bytes)

LAN – Local Area Network: Computer network that is isolated from the Internet by a router/firewall. A home based WiFi service or Ethernet jacks on the office wall would be examples of LAN connections.

MB – MegaByte (1,000,000 bytes)

RJ45 – Physical Ethernet connector. Looks like a telephone connector, but bigger.

SSID – Service Set Identifier: Also known as the name of your WiFi network.

UPS - Uninterruptible Power Supply: A device that provides continuous power to computer equipment during short power outages.

URL – Universal Resource Locator: What you type into a browser to go to a website. Example: www.RavneShoeSecurity.com

VA – Volt Amps: A measure of UPS capacity.

WAN – Wide Area Network. A network that interconnects LANs. Generally known as the Internet.

WEP/WPA/WPA2 – Encryption methods used for WiFi.

WiFi – Wireless IP protocol used in homes and businesses

WPS – Wireless Protected Setup: A feature where a button is pressed on the WiFi router and a new WiFi device at the same time. This causes the router to send the SSID/key info to the new WiFi device.